


RS-4

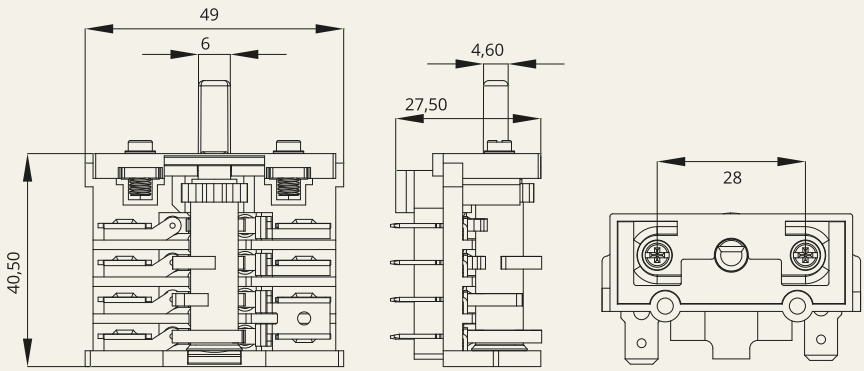

Contact Diagram

Series	Pos.	0°	72°	144°	216°	288°
4500-T	Contact	0	1	2	3	4
	1-1a		X	X	X	X
	2-2a		X		X	X
	3-3a			X	X	X
	4-4a					X

Series	Pos.	0°	72°	144°	216°	288°
4600-T	Contact	0	1	2	3	4
	1-1a		X	X	X	X
	2-2a		X		X	
	3-3a		X	X		
	4-4a					X

Series	Pos.	0°	72°	144°	216°	288°
4700-T	Contact	0	1	2	3	4
	1-1a		X	X	X	X
	2-2a			X		
	3-3a				X	
	4-4a					X

Series	Pos.	0°	72°	144°	216°	288°
4500-D	Contact	0	1	2	3	4
	1-1a		X	X	X	X
	2-2a		X		X	X
	3-3a			X	X	X
	4-4a					X

22

Terminal Type

