


RS-5

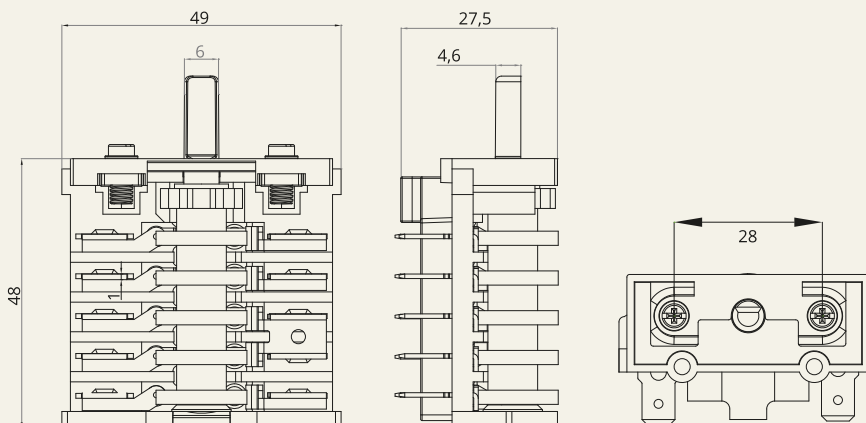

Contact Diagram

Series	Pos.	0°	72°	144°	216°	288°
	Contact	0	1	2	3	4
5500-R	1-1a		X	X	X	X
	2-2a			X		
	3-3a				X	
	4-4a					X
	5-5a		X	X	X	X

Series	Pos.	0°	51,4°	102,8°	154,2°	205,6°	257°	308,4°
	Contact	0	1	2	3	4	5	6
5600-F	1-1a		X	X	X	X	X	X
	2-2a		X		X			
	3-3a			X	X			
	4-4a					X		X
	5-5a						X	X

Series	Pos.	0°	60°	120°	180°	240°	300°
	Contact	0	1	2	3	4	5
5700-F	1-1a		X	X	X	X	X
	2-2a		X		X		
	3-3a			X	X		
	4-4a					X	
	5-5a					X	X

Series	Pos.	0°	51,4°	102,8°	154,2°	205,6°	257°	308,4°
	Contact	0	1	2	3	4	5	6
5800-R	1-1a		X	X	X	X	X	X
	2-2a			X	X	X		
	3-3a			X	X		X	
	4-4a							X
	5-5a		X	X				

Series	Pos.	0°	60°	120°	180°	240°	300°
	Contact	0	1	2	3	4	5
5900-R	1-1a		X	X	X	X	X
	2-2a		X		X	X	
	3-3a			X	X	X	
	4-4a					X	
	5-5a						X

Terminal Type

