


**RS-3**

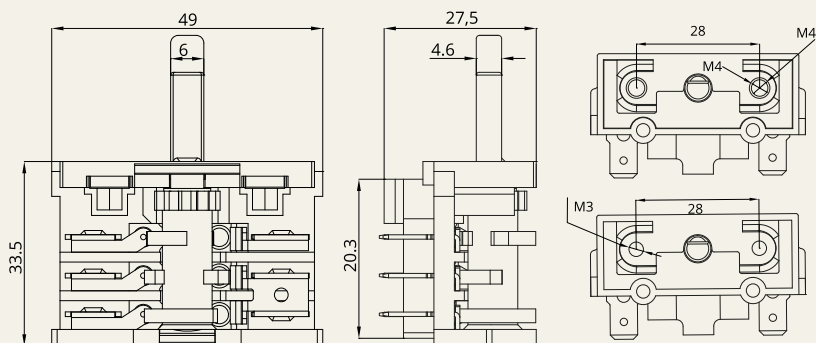

**Contact Diagram**

Series	Pos.	0°	72°	144°	216°	288°
Contact		0	1	2	3	4
3500-D	1-1a		X		X	X
	2-2a			X	X	
	3-3a					X

Series	Pos.	0°	72°	144°	216°	288°
Contact		0	1	2	3	4
3550-T	1-1a		X		X	X
	2-2a			X	X	
	3-3a					X

Series	Pos.	0°	72°	144°	216°	288°
Contact		0	1	2	3	4
3560-T	1-1a		X		X	X
	2-2a			X	X	X
	3-3a					X

Series	Pos.	0°	90°	180°	270°
Contact		0	1	2	3
4528/4T	1-1a		X	X	X
	2-2a		X		
	3-3a			X	X

Series	Pos.	0°	30°	60°
Contact		0	1	2
3700-D	1-1a		X	X
	2-2a			X
	3-3a			X

Series	Pos.	0°	90°	180°	270°
Contact		0	1	2	3
3800-T	1-1a		X		X
	2-2a			X	X
	3-3a		X	X	X

Series	Pos.	0°	90°	180°	270°
Contact		0	1	2	3
3900-D	1-1a	X			
	2-2a			X	X
	3-3a		X		X

Series	Pos.	0°	90°	180°	270°
Contact		0	1	2	3
3400-T	1-1a		X		
	2-2a			X	X
	3-3a				X

Series	Pos.	0°	72°	144°	216°	288°
Contact		0	1	2	3	4
3300-D	1-1a				X	X
	2-2a			X		X
	3-3a		X	X	X	X

**Terminal Type**

